

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
10003022	PARTS KIT,SEAL,REPLMT,CYL,TOW HOOK	2	WAGNER ST3.5 SCOOP		
0101195163	PIN,STRAIGHT,HEADLESS,PARALLEL	1	ATLAS COPCO BOLTEC 235 BOLTER		
0108-1336	PIN	9	SLUSHERS / TUGGERS		
0108135300	PIN	4	ATLAS COPCO BOLTEC 235 BOLTER		
0147-1418-03	SCREW	2	ATLAS COPCO H206 JUMBO DRILL		
0211-1322	SCREW,CAP,SOCKET HEAD,M8X16	5	ATLAS COPCO H206 JUMBO DRILL		
0211-1402	SCREW,CAP,SOCKET HEAD,M12X30	6	ATLAS COPCO H206 JUMBO DRILL		
0211-1493	SCREW,CAP,SOCKET HEAD,M16X130	100	ATLAS COPCO H206 JUMBO DRILL		
0291-1118	NUT,SELF-LOCKING,24MM,HEX,NYLOCK	1	ATLAS COPCO LM56 LOADER		
0291112826	NUT,SELF-LOCKING,EXTENDED WASHER,HEX	2	ATLAS COPCO BOLTEC 235 BOLTER		
0291118001	NUT,SELF-LOCKING,HEX	1	ATLAS COPCO BOLTEC 235 BOLTER		
0300027491	WASHER,FLAT,PLAIN	1	ATLAS COPCO BOLTEC 235 BOLTER		
0300801000	WASHER,FLAT,PLAIN	1	ATLAS COPCO BOLTEC 235 BOLTER		
0300801900	WASHER,FLAT,PLAIN	1	ATLAS COPCO BOLTEC 235 BOLTER		
0301223500	WASHER,FLAT,PLAIN	1	ATLAS COPCO BOLTEC 235 BOLTER		
0301-2344	WASHER	4	ATLAS COPCO CAVO 310 LOADER		
0324155016	WASHER,LOCK,ADJUSTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0324155147	WASHER,FLAT,ADJUSTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0335350132	RING,RETAINING,LOCK	1	ATLAS COPCO BOLTEC 235 BOLTER		
0500450012	BUSHING,SLEEVE,FLANGE	1	ATLAS COPCO BOLTEC 235 BOLTER		
0500450082	BEARING,SLEEVE,FLANGED	3	ATLAS COPCO BOLTEC 235 BOLTER		
0501001200	BEARING,PLAIN,SELF-ALIGNING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0501002000	BEARING,PLAIN,SELF-ALIGNING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0509012112	BEARING,ROLLER,TAPERED	1	ATLAS COPCO BOLTEC 235 BOLTER		
0509022100	BEARING,ROLLER,CYLINDRICAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
0516410005	RING,BEARING,INNER	1	ATLAS COPCO BOLTEC 235 BOLTER		
0516410025	SPACER,SLEEVE,INNER RING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0516410026	SPACER,SLEEVE,INNER RING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0605830100	BUSHING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
0657570300	GASKET	2	ATLAS COPCO 104 BOOMER JUMBO		
0661101400	WASHER,SEAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
0661102000	WASHER,SEAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
0661-1026	SEAL RING	12	ATLAS COPCO H206 JUMBO DRILL		
0663-2100-69	O-RING	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
0663-2128	O-RING,MOTOR	2	ATLAS COPCO CAVO 310 LOADER		
0665001016	SEAL,PLAIN,RING	1	ATLAS COPCO BOLTEC 235 BOLTER		
0665917000	RING,WIPER	1	ATLAS COPCO BOLTEC 235 BOLTER		
0665918100	RING,WIPER	1	ATLAS COPCO BOLTEC 235 BOLTER		
0665-9218-00	RING,WIPER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
0666-2000-34	SEAL,PLAIN,RADIAL,LIP	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
0666600048	SEAL,PLAIN ENCASED,RADIAL LIP	1	ATLAS COPCO BOLTEC 235 BOLTER		
0666-7188-01	SEAL,PLAIN ENCASED,RADIAL LIP	2	ATLAS COPCO BOLTEC 235 BOLTER	ATLAS COPCO H206 JUMBO DRILL	
0686420600 (NEW)	PLUG	1	ATLAS COPCO CAVO 310 LOADER		
0686644203	PLUG,BOSS	1	ATLAS COPCO BOLTEC 235 BOLTER		
0686644207	PLUG,BOSS	1	ATLAS COPCO BOLTEC 235 BOLTER		
0686644300	PLUG,BOSS	1	ATLAS COPCO BOLTEC 235 BOLTER		
0686644400	PLUG,BOSS	1	ATLAS COPCO BOLTEC 235 BOLTER		
0690318100	PLATE,PROCESSED	1	ATLAS COPCO BOLTEC 235 BOLTER		
0823005016	VALVE,CHECK	1	ATLAS COPCO BOLTEC 235 BOLTER		
1011349700	DISK,VALVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
101-1363	PIN	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
106-4404	PIN	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
108-1342	PIN	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
1090036700	SPRING,HELICAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
111-1311	PIN,SPLIT	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
111-1449	PIN,SPRING,SPLIT	27	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
1503-0247	O RING MATERIAL	2	ATLAS COPCO H206 JUMBO DRILL		
192-1243	SCREW,STOP	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
194-1319	SETSCREW	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
211-1409	SCREW	13	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
211-5491	BOLT,M/C	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
216-1363	SCREW	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
23415	DRUM BRAKE WHEEL	1	ALTAS LOCOMOTIVE		
2422436	HEAD,FLUID FILT,FUEL	2	WAGNER ST3.5 SCOOP		
263-2111	NUT	15	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
300432	PARTS KIT,LIN ACT CYL ASSY,REPAIR	4	WAGNER ST3.5 SCOOP		
301-2198	WASHER	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
301-2210	WASHER	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
3012358	WASHER	31	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
3115-0286	DOME NUT	3	ATLAS COPCO 104 BOOMER JUMBO	ATLAS COPCO H206 JUMBO DRILL	
3115-0287	WASHER,FLAT	2	ATLAS COPCO 104 BOOMER JUMBO	ATLAS COPCO H206 JUMBO DRILL	
3115-0768	SHIM	12	ATLAS COPCO H206 JUMBO DRILL		
3115-0796	PLUG REGULATING	2			
3115-0839-80	MOTOR,HYDRAULIC	1			
3115-0845	SEAT SEAL	2	ATLAS COPCO H206 JUMBO DRILL		
3115-1029	PISTON	2			
3115-1620	GUIDE	2	ATLAS COPCO H206 JUMBO DRILL		
3115-1696	SEAL RING	1	ATLAS COPCO H206 JUMBO DRILL		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
3115270200	SCREW,M/C,HEX	3	ATLAS COPCO 104 BOOMER JUMBO		
3115301900	BUSHING,SLEEVE,GUIDE	2	ATLAS COPCO 281 BOOMER JUMBO		
3115302000	BUSHING,SLEEVE,STOP RING	3	ATLAS COPCO 281 BOOMER JUMBO		
3125-0639	BUFFER	1	ATLAS COPCO H206 JUMBO DRILL		
3125217900	BUSHING,SLEEVE,FLANGE,SPLIT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3125-2928-80	VALVE LIMIT	1	ATLAS COPCO H206 JUMBO DRILL		
3125307200	BUSHING,SLEEVE,FLANGE,SPLIT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3125307300	SPACER,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3125307800	BUSHING,SLEEVE,FLANGE,SPLIT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3125496400	BUSHING,SLEEVE	4	ATLAS COPCO BOLTEC 235 BOLTER		
3125566200	VALVE,SAFETY RELIEF,PRESSURE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3125900400	VALVE,CHECK	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128028901	FLANGE,PLATE	13	ATLAS COPCO BOLTEC 235 BOLTER		
3128028905	CHAIN ASSY,SINGLE LEG	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128045801	LINER,WEAR,MTL,SLIDE BAR,L=3128MM	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128047900	SPACER,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128070900	BUSHING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128201985	VALVE ASSY,MANIFOLD,PRESS REDUCING	2	ATLAS COPCO BOLTEC 235 BOLTER		
3128202015	VALVE,FLOW CONTROL,PRESS REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128202018	VALVE,FLOW CONTROL,PRESS REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128202101	BUSHING HALF,SLEEVE,BB22	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128209100	BUSHING,SLEEVE,SEGMENT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128209302	SEAL,PLAIN	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128215200	BUSHING,SLEEVE,FLANGE,SPLIT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128253806	EXTENSION SHAFT,EXTENDER	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128253808	COUPLING,PIPE,THREADED SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128253995	VALVE,CHECK	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128257938	PIN,STRAIGHT,HEADED,GUIDE	3	ATLAS COPCO BOLTEC 235 BOLTER		
3128300975	PLATE,PROCESSED,PROTECTION	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128302300	BRACKET,PIPE,CLAMP	2	ATLAS COPCO 281 BOOMER JUMBO		
3128302310	O-RING	1	ATLAS COPCO 104 BOOMER JUMBO		
3128303896	BUSHING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128305149	BUSHING,SLEEVE,FLANGED,ATTACHMENT	5	ATLAS COPCO 281 BOOMER JUMBO	ATLAS COPCO 104 BOOMER JUMBO	
3128309116	PLATE,PROCESSED,SHAFT LOCK	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128309254	CYLINDER ASSY,ACT,LIN,HYD	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128309270	BUSHING HALF,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128309271	BUSHING HALF,SLEEVE	2	ATLAS COPCO BOLTEC 235 BOLTER		
3128309272	BUSHING HALF,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128309273	BUSHING HALF,SLEEVE	3	ATLAS COPCO BOLTEC 235 BOLTER		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
3128309441	BOLT,M/C,FITTING BOLT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128309933	PLATE,PROCESSED	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128310478	PLATE,PROCESSED	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128312541	MENDER,HOSE,NIPPLE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128312583	PARTS KIT,GEARBOX,BEARING SET	1	ATLAS COPCO BOLTEC 235 BOLTER		
3128315071	PLATE,PROCESSED,ADJUSTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3163185400	SHACKLE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176205300	PLATE,PROCESSED,CONNECTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176352380	STRAINER,SEDIMENT	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176404990	PLATE,MARKING,BLANK	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176419200	PUSH BUTTON	1	ATLAS COPCO 281 BOOMER JUMBO		
3176424501	LAMP,MH,HALOGEN BULB,500W	1	ATLAS COPCO 104 BOOMER JUMBO		
3176458905	SWITCH,PRESS	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176523300	VALVE,FLOW CONTROL	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176610100	PLATE,MOUNTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176-6349	NIPPLE	6	ATLAS COPCO H206 JUMBO DRILL		
3176651800	ADAPTER,STR,TUBE TO BOSS	3	ATLAS COPCO 104 BOOMER JUMBO		
3176757200	PLATE,MOUNTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176757301	PLATE,MOUNTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176757302	PLATE,MOUNTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176757500	PLATE,MOUNTING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3176771400	BUSHING,SLEEVE	2	ATLAS COPCO BOLTEC 235 BOLTER		
3176837700	VALVE,SHUTTLE	1	ATLAS COPCO 104 BOOMER JUMBO		
3177006001	ROLLER,GUIDE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3177303600	VALVE,REGULATING,FLUID PRESS,REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3177309209	VALVE,SOLENOID,DIRECTION	1	ATLAS COPCO BOLTEC 235 BOLTER		
3177309252	COIL,ELECTRICAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
3196-2096-00	PLATE,SWELLEX,6"X6"X1/4",MN24C,(20BDL)	220			
3214403300	SWITCH,PRESS	1	ATLAS COPCO BOLTEC 235 BOLTER		
3214739100	VALVE,CHECK,DOUBLE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3214897480	VALVE,FLOW CONTROL,DIRECTION VALVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3215959500	VALVE,REGULATING,FLUID PRESS,REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217001002	PUSH BUTTON,TRIGGER	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217001201	PUSH BUTTON	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217391253	CLEVIS,ROD END, YOKE	2	ATLAS COPCO BOLTEC 235 BOLTER		
3217391254	FLANGE,PIPE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217559901	ADAPTER,HOUSING,INTER FLANGE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217651301	RESTRICTOR,FLUID FLOW	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217740301	CAP,FILLER OPENING,COVER	1	ATLAS COPCO BOLTEC 235 BOLTER		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

<b>MRF P/N</b>	<b>Material Description</b>	<b>QOH</b>	<b>Use equip 01</b>	<b>Use equip 02</b>	<b>Use equip 03</b>
3217740380	RESERVOIR,HYD OIL	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217801402	VALVE,FLOW CONTROL,SEQUENCE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217884005	VALVE,THROTTLE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217903303	GASKET	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217903319	FLANGE,PIPE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217908207	VALVE,SAFETY RELIEF,PRESSURE	2	ATLAS COPCO BOLTEC 235 BOLTER		
3217929404	GASKET	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217929425	ROD,STRAIGHT,HEADLESS	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217929427	ROD,STRAIGHT,HEADLESS	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217934140	VALVE,FLOW CONTROL,PRESS REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217976610	SWIVEL,LUBRICATION LINE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217976611	PIPE ASSY,MTL,EXTENSION	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217976616	COVER,ACCESS,GREASE DRUM	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217977300	VALVE,FLOW CONTROL	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217977313	BUSHING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217980120	VALVE,CHECK	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217983405	BODY SECTION,DIRNL CTL VALVE,INLET	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217983412	SEAL SET	4	ATLAS COPCO 281 BOOMER JUMBO		
3217983448	VALVE,SAFETY RELIEF,PRESSURE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217983449	VALVE,SAFETY RELIEF,PRESSURE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217988206	CORD ASSY,ELEC,PLUG	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217996321	VALVE,FLOW CONTROL,PRESS REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217996322	VALVE,FLOW CONTROL,PRESS REDUCING	1	ATLAS COPCO BOLTEC 235 BOLTER		
3217999400	VALVE,SOLENOID	1	ATLAS COPCO BOLTEC 235 BOLTER		
3222182453	BEARING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3222182454	BEARING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
3222303464	SPRING,HELICAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
3222326896	VALVE,CHECK,DOUBLE	1	ATLAS COPCO BOLTEC 235 BOLTER		
333-6108	WASHER,LOCK	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
335-1122	RING,RETAINING,CIRCLIP	1	SLUSHERS / TUGGERS		
335-1147	RING,RETAINING,CIRCLIP	38	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
335-2115	RING,RETAINING,CIRCLIP	20	SLUSHERS / TUGGERS		
335-2142	RING,RETAINING,CIRCLIP	6	ATLAS COPCO CAVO 310 LOADER		
335-2157	RING,RETAINING,CIRCLIP	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
335-2179	RING,RETAINING,CIRCLIP	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
335-2182	RING,RETAINING,CIRCLIP	15	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
337-8300	KEY	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	
351809	SEAL SET,DUMP	1	WAGNER 416 HAUL TRUCK		
355427	SPIDER,UV-JOINT,W/BRG	1	WAGNER ST3.5 SCOOP		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
364397	YOKE,UNIVERSAL JOINT	1	ATLAS COPCO MT408 DUMP TRUCK		
371079	BEARING UNIT,BALL,P/BLOCK,3/4",2 BOLT	2	WAGNER 416 HAUL TRUCK		
378817	GEAR,HEL,DRV	1	WAGNER ST3.5 SCOOP		
384 3000-02	HOLDER,SPRING,CUP	2	SLUSHERS / TUGGERS		
4000-7146-58	PIN	8	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
4180-0396-70	HOLDER	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
4301-1532	SCREW	4	SLUSHERS / TUGGERS		
4306-6746	ANCHOR,BRK BAND	5	SLUSHERS / TUGGERS		
4306-6748	BRACKET,MTG	4	SLUSHERS / TUGGERS		
4350-0018	SHAFT	2	SLUSHERS / TUGGERS		
4350-0026	GASKET	7	SLUSHERS / TUGGERS		
4350176000	SHAFT,STRAIGHT	1	ATLAS COPCO BOLTEC 235 BOLTER		
4350-1990-00	HOUSING,CYL,PNEU ACTR	2	SLUSHERS / TUGGERS		
4350-2034	SPRING	1	SLUSHERS / TUGGERS		
4350205690	VANE SET,ROTARY PUMP	1	ATLAS COPCO BOLTEC 235 BOLTER		
4350205691	SEAL SET	1	ATLAS COPCO BOLTEC 235 BOLTER		
4406-3929	CYLINDER ASSY,ACT,ROT	6	SLUSHERS / TUGGERS		
4406-3930-80	PISTON,COMPR	3	SLUSHERS / TUGGERS		
4406-3931	PIN	2	SLUSHERS / TUGGERS		
4406-3932	WASHER	11	SLUSHERS / TUGGERS		
4406-3934	WASHER	3	SLUSHERS / TUGGERS		
4406-3942	LINER,WEAR,MTL,VLV	3	SLUSHERS / TUGGERS		
4406-3944	ADAPTER,HSG	1	SLUSHERS / TUGGERS		
4406-684300	HANDLE,CRANK	1	SLUSHERS / TUGGERS		
4406-6844	PIN,STR,HDED,GUIDE	3	SLUSHERS / TUGGERS		
4406-7384	COVER,ACCESS	1	SLUSHERS / TUGGERS		
4450-0262	GASKET	3	SLUSHERS / TUGGERS		
4450-0265	GASKET	6	SLUSHERS / TUGGERS		
4450-0272-80	GAUGE ROD,LIQ LVL	1	SLUSHERS / TUGGERS		
4450-0478	VALVE,MAIN	4	SLUSHERS / TUGGERS		
4450-0821-90	VANE SET,ROT COMPR	1	SLUSHERS / TUGGERS		
4450-0887-00	LINER,PLUG,COCK	1	SLUSHERS / TUGGERS		
4910-0108	SOCKET,GLASS	15			
4910-0150	SPRING	2	SLUSHERS / TUGGERS		
4910-0216	SHAFT	1			
4910-0243	RING,RBR	3			
4910-0256	FILTER ELMT,INTAKE AIR CLEANER	2			
4910-0295-80	ROTOR,PUMP	1			
4910-0301	STATOR,GEN	3			

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
4910-0303-80	CONTACT,ELEC,DISC (COMPLETE)	2			
4910-0333	RING	1			
4910-0334	SLEEVE,HEX	3			
4910-0335	SLEEVE	4			
4910-0337	SLEEVE	2			
4910-0338	SPRING	1			
4910-0349	LAMP,2 PIN	3			
5000-0273	SPRING,HEL	5	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5000-0286	BUSHING,SLEEVE	7	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5000-0291	PISTON,CYL ASSY	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5000-0335	ROD,CYL ASSY	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5021-0175	PLATE,END,	1	ATLAS COPCO LM57 LOADER	ATLAS COPCO LM56 LOADER	
5021-0191	WASHER,SPRING	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5031-0290-80	BODY,VLV	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5032-0155-01	BODY,VLV	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5032-0246	BUSHING	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5032-0255	GEAR,BEVEL	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5032-0277	HOUSING,CYL,PNEU ACTR	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5032-0321	WASHER	3	ATLAS COPCO CAVO 310 LOADER		
5032-0323	CYLINDER SLV	2	ATLAS COPCO CAVO 310 LOADER		
5032-0327-00	GASKET	6	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5032-0328	ROD,CYL ASSY	2	ATLAS COPCO CAVO 310 LOADER		
5032-0329	COVER,AIR CTRL COMPARTMENT	2	ATLAS COPCO CAVO 310 LOADER		
5042-0202	GASKET	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5042-0233	ADAPTER,HSG	3	ATLAS COPCO CAVO 310 LOADER		
5042-0257	COVER,CTRL PANEL	5	ATLAS COPCO CAVO 310 LOADER		
5055-0126	SEAL RING	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-0497	SPACER,RING	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-0849	SHIM	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-0850	SHIM	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-1462	WASHER	8	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-1503	GEAR	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-1504	GEAR	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-3504	SHIM	11	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5096-7232	SPACER	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5103-0561	GEAR,BEVEL	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0148-80	GEAR,SPUR,WHEEL,W/BUSHING	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0151	GEAR,BEVEL	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0152	COVER,ACCESS	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

<b>MRF P/N</b>	<b>Material Description</b>	<b>QOH</b>	<b>Use equip 01</b>	<b>Use equip 02</b>	<b>Use equip 03</b>
5104-0154	SHAFT,C/W PINION	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0158	SEAL RING	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0162	SPACER	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0165	COVER,ACCESS	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0168	COVER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0172	SHAFT,W/PINION	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0187	COUPLING,HALF	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0199	ANCHOR PLATE,WIRE ROPE ASSY,REAR	6	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0201	HOLDER,SPRING,PLATE	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0203	SHIM	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0204	SHIM	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0205	SHIM	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0236	PACKING,PREFORMED	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0280	BRACE,RETRACT SUP,HOLDER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0287	HOUSING,BRG	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0377	SPRING,HEL	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0427	SHAFT,W/PINION	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0429	GEAR,SPUR,WHEEL	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0511	COVER,ACCESS	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0522	SPROCKET WHEEL	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0577	SHAFT	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0638	SHAFT	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0707	HOUSING & INSERT,PLUG,16 MALE PINS	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0708	HOUSING & INSERT,PLUG,16 FEMALE PINS	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0770	PLATE,MTG,TRACK,GUIDE	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0802	VALVE	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0803	SHOE	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5104-0804	CONNECTOR,PLUG,TERMINAL	2	ATLAS COPCO CAVO 310 LOADER		
5104-0868-80	BASE,STAND,LM56	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5105-1144	WASHER	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5107-1556-00	RING,SEAL	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5107-1588-00	LEVER,MANUAL CTRL	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5107-1679-00	SPACER	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5107-1711-80	VALVE,LIN,DIRNL CTRL	1	ATLAS COPCO CAVO 310 LOADER		
5107-1712-00	PLATE,MTG	2	ATLAS COPCO CAVO 310 LOADER		
5112-0105	COVER	2	ATLAS COPCO CAVO 310 LOADER		
5112-0132	SHAFT	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-0135	SPACER	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-0136	SPACER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER



**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
5112-0167	WASHER	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-0299	SCREW	9	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-0536	SHAFT	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-0621	COVER,HOPPER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1076	BRACKET,MTG	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1084	PLUG	2	ATLAS COPCO CAVO 310 LOADER		
5112-1143	SWITCH,TOGGLE,50VDC	2	ATLAS COPCO CAVO 310 LOADER		
5112-1155	FILTER ELMT,INTAKE AIR CLEANER	2	ATLAS COPCO CAVO 310 LOADER		
5112-1156	CLEVIS,ROD END	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1157	BRACKET,ANG,SUPPORT,BODY	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1175-00	BUTTON	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1177	BRACKET,MTG	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1181	RIM,WHEEL,PNEU TIRE,HALF (9.00X10 TIRE)	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1182	RIM,WHEEL,PNEU TIRE,HALF (9.00X10 TIRE)	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5112-1182 & 1183	RIM,WHEEL,PNEUMATIC TIRE,2PIECE/SET	1	ATLAS COPCO CAVO 310 LOADER		
5112255200	SWITCH,ROTARY,CLUTCH CONTROL	1	ATLAS COPCO 281 BOOMER JUMBO		
5112256024	NUT,PLAIN,CONE SEAT,HEX,WHEEL	4	ATLAS COPCO 104 BOOMER JUMBO		
5112310053	BOLT,RIBBED NECK,WHEEL BOLT	4	ATLAS COPCO 104 BOOMER JUMBO		
5114-0364	SHAFT	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5114-0774	COVER	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
5114-1142	BRACE ASSY,TILTING,BAR	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
517-0127	ROLLER,BEARING,NEEDLE	1	SLUSHERS / TUGGERS		
517-0459	ROLLER,BRG	22	SLUSHERS / TUGGERS		
5202-111-001 WARNE	ADAPTER,ARMATURE & SPLINED	1			
5500311100	O-RING	1	WAGNER ST3.5 SCOOP		
5500614200	SPACER,RING,WEAR	3	WAGNER ST3.5 SCOOP		
5505950100	COVER	1	WAGNER ST3.5 SCOOP		
5530039900	SEAL SET,STEER	2	WAGNER 416 HAUL TRUCK		
5530042000	SEAL SET	2	WAGNER ST3.5 SCOOP		
5530048900	SEAL SET,HOIST	3	WAGNER ST3.5 SCOOP		
5530755200	NUT	1	WAGNER 416 HAUL TRUCK		
5533272700	O-RING	5	WAGNER ST3.5 SCOOP		
5533272800	O-RING	10	WAGNER ST3.5 SCOOP		
5535277600	VALVE,SAFETY	2	WAGNER ST3.5 SCOOP		
5536154300	SPIDER,UV-JOINT,W/BRG	1	ATLAS COPCO MT408 DUMP TRUCK		
5537001900	BAND,RET,TUBE	12	WAGNER ST3.5 SCOOP		
5537247300	PLUNGER,DETENT,BALL	3	WAGNER ST3.5 SCOOP		
5537551800	PLATE ASSY,MOUNTING,LEVER JOINT	1	ATLAS COPCO BOLTEC 235 BOLTER		
5537788700	STUD,BALL,BALL,PIVOT	3	WAGNER ST3.5 SCOOP		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
5537813500	RING,RETAINING	2	WAGNER ST3.5 SCOOP		
5540760600	SHAFT,AXLE,AUTO	2	WAGNER ST3.5 SCOOP		
5540761600	O-RING,56MM ID,4MM SECT	1	WAGNER 416 HAUL TRUCK		
5540816300	SCREW	2	WAGNER 416 HAUL TRUCK		
5540817200	CUSHION,SEAT,VEHICULAR,BOTTOM	3	WAGNER ST3.5 SCOOP		
5540871000	SEAL,HUB	5	WAGNER 416 HAUL TRUCK		
5540907000	HEAD,FLUID FILTER,TRANSMISSION	4	WAGNER ST3.5 SCOOP		
5540916500	ROTOR,DISK BRK,PLATE,FRICTION	2	WAGNER ST3.5 SCOOP		
5540916700	WASHER,FLAT,THRUST	1	WAGNER ST3.5 SCOOP		
5541111200	PARTS KIT,DISK BRK,WET	2	WAGNER 416 HAUL TRUCK		
5541240200	PISTON,CYL ASSY	1	WAGNER ST3.5 SCOOP		
5541240900	ROD,CYL ASSY	6	WAGNER ST3.5 SCOOP		
5541263900	BUSHING	1	WAGNER ST3.5 SCOOP		
5541366200	PARTS KIT,SEAL,MECH	1	WAGNER 416 HAUL TRUCK		
5541559600	ROD,CYL ASSY	2	WAGNER 416 HAUL TRUCK		
5541706700	PUMP,HYD,HAND ASSY	1	WAGNER ST3.5 SCOOP		
5553428200	BUSHING	4	WAGNER 416 HAUL TRUCK		
5564586900	GUARD,MECH DRV	1	WAGNER ST3.5 SCOOP		
5564591800	GUARD,MECH DRV	1	WAGNER ST3.5 SCOOP		
5570245700	LAMP ASSY	1	WAGNER 416 HAUL TRUCK		
5570448200	AIR CLEANER,INTAKE	1	WAGNER ST3.5 SCOOP		
5570838500	SHROUD,FAN,RADIATOR	1	WAGNER ST3.5 SCOOP		
5571077400	VALVE,CTRL	1	WAGNER ST3.5 SCOOP		
5571430400	CAP,LIN ACT CYL,PLATE,RETAINER	2	WAGNER ST3.5 SCOOP		
5571459900	ROD,CYL ASSY,TILT	2	WAGNER ST3.5 SCOOP		
5571504000	ROD,CYL ASSY	3	WAGNER ST3.5 SCOOP		
5571526100	ROD,CYL ASSY	4	WAGNER ST3.5 SCOOP		
5571589900	PROPELLER SHAFT & UV-JOINT,DRV LINE	1	WAGNER ST3.5 SCOOP		
5571676900	SPACER,RING,WEAR	2	WAGNER ST3.5 SCOOP		
6003-5210	ROD,THD END	2	ATLAS COPCO SWELLEX PUMPS		
604119	BUSHING	3	WAGNER 416 HAUL TRUCK		
611-1203	SLEEVE	3	ATLAS COPCO LM57 LOADER	ATLAS COPCO LM56 LOADER	
611524	SPACER,RING,WEAR	2	WAGNER 416 HAUL TRUCK		
6201-9444	NUT	2	ATLAS COPCO SWELLEX PUMPS		
6202-0545	GASKET	4	ATLAS COPCO SWELLEX PUMPS		
620221	BUSHING	2	WAGNER ST3.5 SCOOP		
6202-9327 (NEW)	PISTON	1			
627-5113	SCREW,BANJO	15	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
640428-36	BUSHING	10	WAGNER ST3.5 SCOOP		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

MRF P/N	Material Description	QOH	Use equip 01	Use equip 02	Use equip 03
6531041	GASKET	1	ATLAS COPCO CAVO 310 LOADER		
653-1115	WASHER	1	ATLAS COPCO LM57 LOADER	ATLAS COPCO LM56 LOADER	
653-1195	GASKET	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
657-5764	PACKING	7	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
657-5796	GASKET	8	ATLAS COPCO LM57 LOADER	ATLAS COPCO LM56 LOADER	
657-5809	GASKET	8	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
657-5823	GASKET	8	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
657-5827	PACKING,PREFORMED	22	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
661-1020	WASHER,SEAL	1	ATLAS COPCO SWELLEX PUMPS		
661-1520	BACK-UP RING,PACKING	28	ATLAS COPCO SWELLEX PUMPS		
663-2121-00	O-RING	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
663-2129	O-RING	6	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
663-9148	O-RING	9	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
665-1175	SEAL RING	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
665-7031	PACKING,CUP SEAL	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
665-7037	PACKING,CUP SEAL	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
665-9245	RING,SCRAPER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
666-2670	SEAL,PLAIN	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
666-4340	SEAL RING	1	SLUSHERS / TUGGERS		
6-6C40MXS	ADAPTER,STRAIGHT,TUBE TO BOSS	6			
6802-1404	BALL,CHECK	2	ATLAS COPCO SWELLEX PUMPS		
680-3814	RING,PISTON	11	SLUSHERS / TUGGERS		
686-3102	PIN	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
8202030204	VALVE,BALL	1	ATLAS COPCO BOLTEC 235 BOLTER		
8202030303	VALVE,BALL	1	ATLAS COPCO BOLTEC 235 BOLTER		
8202031129	VALVE,BALL	1	ATLAS COPCO BOLTEC 235 BOLTER		
8202031137	VALVE,BALL	1	ATLAS COPCO BOLTEC 235 BOLTER		
8202-0901-09	VALVE	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
8202120559	COUPLING ASSY,QUICK DISCONNECT	2	ATLAS COPCO BOLTEC 235 BOLTER		
8202130038	COUPLING ASSY,QUICK DISCONNECT	1	ATLAS COPCO BOLTEC 235 BOLTER		
8204-0850-08	VALVE	7	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
8231108575	SWITCH,PRESS	1	ATLAS COPCO BOLTEC 235 BOLTER		
8231120035	CARTRIDGE,CHECK VALVE,PRESS RELIEF	1	ATLAS COPCO BOLTEC 235 BOLTER		
8349-4010-014 MN12	ANCHOR,R/FACE,SWELLEX,4FT	370			
8394-0175-06 MN12	ANCHOR,R/FACE,SWELLEX,8FT	1,800			
8411 0302-43	MOTOR,PNEU,VANE	1	ATLAS COPCO CAVO 310 LOADER		
9000-0331	NUT	4	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
9000-0334	NUT	1	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
9000-0519	NUT	5	ATLAS COPCO CAVO 310 LOADER		

**ATLAS COPCO PARTS SUMMARY AS AT 11.20.14**

<b>MRF P/N</b>	<b>Material Description</b>	<b>QOH</b>	<b>Use equip 01</b>	<b>Use equip 02</b>	<b>Use equip 03</b>
9090023800	GAUGE,PRESSURE,DIAL INDICATING	1	ATLAS COPCO BOLTEC 235 BOLTER		
9106063014	VALVE,FLOW CONTROL,DIRECTION VALVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
9106063123	CARTRIDGE,CHECK VALVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
9106064955	COVER,PROTECTIVE,DUST & MOIST SEAL,CAP	1	ATLAS COPCO BOLTEC 235 BOLTER		
9106170900	SPACER,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
9110675300	PIN,STRAIGHT,HEADLESS,SHAFT	1	ATLAS COPCO BOLTEC 235 BOLTER		
9110861520	GAUGE,PRESSURE,DIAL INDICATING,SET	1	ATLAS COPCO BOLTEC 235 BOLTER		
9110955500	CATCH,FRICTION,LOCKING	1	ATLAS COPCO BOLTEC 235 BOLTER		
9120099011	SEAL SET	1	ATLAS COPCO BOLTEC 235 BOLTER		
9121-5509-50	SEAL SET	2	ATLAS COPCO H206 JUMBO DRILL		
9121667650	SEAL SET	1	ATLAS COPCO BOLTEC 235 BOLTER		
9123355800	PACKING NUT,COVER	1	ATLAS COPCO BOLTEC 235 BOLTER		
9123985400	PLATE,PROCESSED,LEVER JOINT	1	ATLAS COPCO BOLTEC 235 BOLTER		
9124 2092	WASHER	2	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
91242545-01	KNOB	2	ATLAS COPCO CAVO 310 LOADER		
9124880800	BUSHING,SLEEVE	1	ATLAS COPCO BOLTEC 235 BOLTER		
9125630300	WASHER,SEAL	3	ATLAS COPCO CAVO 320 LOADER	ATLAS COPCO CAVO 310 LOADER	ATLAS COPCO LM56 LOADER
9126396000	PACKING NUT,COVER	1	ATLAS COPCO BOLTEC 235 BOLTER		
9126457702	DISK,VALVE,CONE	1	ATLAS COPCO BOLTEC 235 BOLTER		
9126457704	DISK,VALVE,CONE	1	ATLAS COPCO BOLTEC 235 BOLTER		
9127215400	SPRING,HELICAL	1	ATLAS COPCO BOLTEC 235 BOLTER		
9128503400	PLUG,BOSS	1	ATLAS COPCO BOLTEC 235 BOLTER		
9128696200	SEAT,BALL SOCKET,PRESSURE PLATE	1	ATLAS COPCO BOLTEC 235 BOLTER		
ARC2507	BARRIER ARC2507 X1/RH X2/LH C	2			
P101244	DEFLECTOR,BAFFLE ASSY	3	WAGNER ST3.5 SCOOP		
P2B-SCM-112	BEARING UNIT,BALL,P/BLOCK,1-3/4"	3	WAGNER 416 HAUL TRUCK		
R1832617	TRANSMISSION,MECHANICAL	1	WAGNER MT413 SHOTCRETE TRUCK		